## *5000 g x 1 g Precision Fruit Sclerometer* **FRUIT HARDNESS TESTER** Model : FR-5105



Your purchase of this FRUIT HARDNESS TESTER marks a step forward for you into the field of precision measurement. Although this METER is a complex and delicate instrument, its durable structure will allow many years of use if proper operating techniques are developed. Please read following the instructions carefully and always keep this within manual easy reach.

# **OPERATION MANUAL**

## **TABLE OF CONTENTS**

1 FEATURES 1
2 SPECIFICATIONS
3 FRONT PANEL DESCRIPTIONS43-1 Universal Sensing Head43-2 LCD Display43-3 Fast Indicator43-4 EAST/SLOW Button4
3-4 TAST/SLOW Button
3-8Power On/Peak Hold43-9Mounting Holes/fixing Screws43-10Battery Cover/Compartment43-1111 mm Penetrometer Tip, FRTP-1143-128 mm Penetrometer Tip, FRTP-843-136 mm Penetrometer Tip, FRTP-64
3-14 3 mm Penetrometer Tip, FRTP-343-15 LCD Back Light Button43-16 DC 9V Power Adapter Input Socket43-17 RS-232 output terminal4
4 MEASURING PROCEDURE54-1 Pay attentions for the measurement54-2 Normal Measurement64-3 Peak Hold Measurement74-4 LCD Back light On/Off.7
5 BATTERY REPLACEMENT 8
6 RS232 PC SERIAL INTERFACE8
7 MOUNTING HOLES & OPTIONAL TEST STAND 10

## **1. FEATURES**

- \* The tester is used to measure the hardness of most kind fruits such as apple, pear, strawberry, grape, large/hard fruits, small/soft fruits. It is suitable for the fruit scientific research department, fruit company, fruit farm, agriculture colleges and universities to improve the fruit quality, the harvest storage, the product transportation... by the fruits' hardness. The useful tester to judge fruit's mature degree.
- \* Max. capacity : 5000 gf x 1 gf.
- \* Unit : g/oz/Newton.
- \* Use load cell sensor, high precision.
- \* Digital display with Peak hold function, easy measurement.
- \* Tension or Compression, Zero.
- \* Positive/ Reverse display.
- \* Large LCD display with back light.
- \* Tip size : 3 mm, 6 mm, 8 mm, 11 mm.
- \* RS-232/USB computer interface.
- \* Complete set with hard carrying case and 4 kind tips (3 mm, 6 mm, 8 mm, 11 mm).
- \* Test stand, FS-1001, optional.
- \* USB cable (USB-01) and the data acquisition are optional.
- \* Peak hold (Max. load) can be held in display during make the measurement.
- \* Zero button can operate both for normal measuring & the " peak hold " operation.
- \* Full capacity zero (tare) control capability.
- \* Fast/Slow response time push button.
- \* Hand held & stand mounted gauges are available.
- \* Low power consumption gives long battery life.
- \* Microprocessor circuit & exclusive load cell transducer.
- \* Over load protection.
- \* Built-in DC 9V power adapter input socket.

## 2. SPECIFICATIONS

Principal	The hardness of Fruit can express by the		
	unit area (S) could undertake the		
	pressure of dynamometer (N), their		
	specific value is just as the hardness ( P ).		
	P = N / S		
	P = Hardness value of fruit (Kg/cm^2)		
	N = Pressure of dynamometer (N, Kg, LB)		
	$S = Area of pressure (m^2, cm^2)$		
Display	LCD ( Liquid crystal display ).		
	5 digits, 16 mm ( 0.63" ) digit size.		
	Back light.		
Display	Positive or Reverse direction, select by		
Direction	the push button on the front panel.		
Function	Tension & Compression (Push & Pull).		
	Normal force, Peak hold (Max. load).		
Peak hold	Will freeze the display value of the		
	Peak load (Max. load).		
Zero	Zero button can be operated both for		
	"normal force" or "peak hold" operation		
Unit select	g/Newton/oz.		
Measure	5,000 g/176.40 oz/49.03 Newton.		
Capacity			
Resolution	1 g/0.05 oz/0.01 Newton.		
Min. Display	3 g/0.10 oz/0.03 Newton.		
Accuracy	$\pm$ ( 0.4 % + 1 digit ), within 23± 5°C.		
	* Under the test weight on 3000 g & 5000 g.		
Update time	Fast Approx. 0.2 second.		
	Slow Approx. 0.6 second.		
Over range	Display show " " when in over		
Indicator	range status.		
Data output	RS-232 serial computer interface.		

Overload	Max. 7 kg.		
Capacity			
Full Scale	Approx. 0.2 mm max.		
Deflection			
Zero/tare	Max. full capacity.		
Control			
Circuit	Exclusive microprocessor LSI-circuit.		
Power Supply	6 x 1.5 V AA (UM-3) size battery		
	or DC 9V adapter (not included).		
Power	Approx. DC 28 mA		
Consumption			
Transducer	Exclusive load cell.		
Operating	0°C to 50°C ( 32°F to 122°F ).		
Temperature			
Operating	Less than 80% RH.		
Humidity			
Dimension	215 x 90 x 45 mm ( 8.5 x 3.5 x 1.8 inch ).		
Weight	650 g (1.43 LB)/with batteries.		
Data output	RS-232 serial computer interface		
Mounting	Main instrument with mounting holes are		
Holes	provided on the back case, easy stand		
	mounting.		
Accessories	Operating manual 1 PC.		
Included	11 mm Penetrometer Tip, FRTP-11 1 PC.		
	8 mm Penetrometer Tip, FRTP-81 PC.		
	6 mm Penetrometer Tip, FRTP-61 PC.		
	3 mm Penetrometer Tip, FRTP-31 PC.		
	Carrying case1 PC.		
Optional	* Test stand, Model : FS-1001		
Accessories	* RS232 cable, Model : UPCB-01.		
	* USB cable, Model : USB-01.		
	* SD card data recorder, DL-9602SD.		
	* Software for data logging & data		
	recorder, Model : SW-U801-WIN.		

### **3. FRONT PANEL DESCRIPTION**







- Fig. 1
- 3-1 Universal Sensing Head
- 3-2 LCD Display
- 3-3 Fast Indicator
- 3-4 FAST/SLOW Button
- 3-5 LCD Reverse Display **Button**
- 3-6 Zero Button
- 3-7 g/Newton/oz Unit Switch
- 3-8 Power Off/On/Peak Hold 0 = Off, 1 = On
- 3-9 Mounting Holes/fixing **Screws**

- 3-10 Battery Cover/ Compartment
- 3-11 11 mm Penetrometer Tip (FRTP-11)
- 3-12 8 mm Penetrometer Tip (FRTP-8)
- 3-13 6 mm Penetrometer Tip (FRTP-6)
- 3-14 3 mm Penetrometer Tip (FRTP-3)
- 3-15 LCD Back Light Button
- 3-16 DC 9V Power Adapter Input Socket
- 3-17 RS-232 output terminal

## 4. MEASURING PROCEDURE

#### 4-1 Pay attentions for the measurement

1) When make the fruit hardness testing, it always use compression function.



Remark :

The meter can use the "Tension "measurement, the display will show the "- "mark automatically. However for the fruit hardness measurement is not use this function typically.

 Pressure head and fruits should be vertical surface. When make the measurement, the Sensing Head along the tip should be on a line with measuring fruits (ref. Fig. 2)



Fig. 2

3) Rotate the Sensing Head is prohibited. Some certain angles between Sensing Head & measuring object are not allowed (ref. Fig. 3).



#### 4-2 Normal Measurement

1) Slide the "Power Off/On/Peak Hold Switch " (3-8, Fig. 1) to the "On " position.

0 = Off, 1 = On

- 2) Determine display unit of g, oz or Newton by selecting "g/Newton/oz Unit Switch " ( 3-7, Fig. 1 ).
- 3) Connect " Sensing Head " (3-1, Fig. 1) with proper " Adapter " (3-11 to 3-14, Fig. 1) and the " Measuring Object " should be in straight line. Don't give any force in standby mode..
- 4) " Zero Adjust " by pushing " Zero Button "( 3-6, Fig. 1 ) before every measurement.
- 5) Start measurement by giving force (push or pull), then the LCD will display the Average reading value.

\* During the measurement, if intend to change the display direction, just push the " Reverse Button " ( 3-5, Fig. 1 ) once.

- \* There are two kind sampling time of display, FAST and SLOW. Push the "FAST/SLOW Button "once (3-4, Fig. 1), if the upper left corner of LCD show "FAST " (Fast Indicator, 3-3, Fig. 1), then the display reading is under the operation of fast sampling time.
- \* If the upper left corner of LCD not show the "Fast Indicator " (3-3, Fig. 1), the display reading is under the slow sampling time.
- \* Over range display of tension function, LCD will show " ----- "
- \* Over range display of compression function, LCD will show " \_\_\_\_\_ "

#### 4-3 Peak Hold Measurement

The meter can measure the peak value of force both of tension & compression operation. The operation procedures of Peak Hold Measurement are same as above " 4-2 Normal Measurement " but should slide the " Power Off/On/Peak Hold Switch " ( 3-8, Fig. 1 ) to the " PEAK H. " position.

Slide the "Power Off/On/Peak Hold Switch " (3-8, Fig. 1) to the "On " position will cancel the peak hold function.

#### 4-4 LCD Back Light On/Off

## **5. BATTERY REPLACEMENT**

- When the LCD shows " Lo ", it is necessary to replace the batteries. However, in-spec. measurement may still be made for several hours after low battery indicator appears before the instrument become inaccurate.
- 2) Take out the battery cover (3-10, Fig. 1) away from the instrument and remove the batteries.
- 3) Install the batteries ( 6 x 1.5 V AA, UM-3 ) correctly into the battery case.

## 6. RS232 PC SERIAL INTERFACE

The instrument features an RS232 output via 3.5 mm Terminal ( 3-17, Fig. 1 ).

The connector output is a 16 digit data stream which can be utilized to the user's specific application.

An RS232 lead with the following connection will be required to link the instrument with the PC serial input.

PC (9W 'D" Connector)
Pin 2
Pin 5

The 16 digit data stream will be displayed in the following format :

D15 D14 D13 D12 D11 D10 D9 D8 D7 D6 D5 D4 D3 D2 D1 D0

#### Each digit indicate the following status :

D0	End Word			
D1 & D8	Display reading, D1 = LSD, D8 = MSD			
	For example :			
	If the display reading is 1234, then D8 to D1 is : 1			
D9	Decimal Point(DP), positision fron right to the			
	left			
	0 = No DP, 1= 1 DP, 2 = 2 DP, 3 = 3 DP			
D10	Polarity			
	0 = Positive 1 = Negative			
D11 & D12	Anunuciator for Display			
	g = 57	Newton = 59	oz =58	
	Kg = 55	LB = 56		
D13	1			
D14	4			
D15	Start Word			

#### **RS232** setting

Baud rate	9600
Parity	No parity
Data bit no.	8 Data bits
Stop bit	1 Stop bit

### 7. MOUNTING HOLES & OPTIONAL TEST STAND

Fruit hardness tester is a precise instrument, best results are obtained when the gauge is fitted to a test stand. Mounting holes (3-9, Fig. 1) are provided on the back of the gauge for easy stand mounting.

#### **Optional Test Stand & accessory :**

\* TEST STAND, Model : FS-1001 Test stand, cooperate with Force gauge, whole system will be become the useful tool for material's tension & compression analysis.

Size : 630 x 250 x 230 mm. Weight : 7.02 Kg (15.4 LB).

