

B. AVG mode :

Under this mode you can average maximum 20 records by pressing the " AVG.START " button manually. You can see the average number from the right-bottom of LCD. The AVG formula listed as below:

$$\frac{1\text{st Records} + \dots + \text{Nth Records}}{N}$$

C. INSTANT mode :

LCD display shows measured number directly.

- 8) Under " 2/3V Max " and " AVG " mode, press " ENTER/RESET " button to reset the previous setting and restart measuring again.

9) Data Hold Function :

During the measuring procedure, pressing the " Data Hold Button " (3-3, Fig. 1) will hold the measured value and the LCD will indicate " HOLD " symbol on the left.

* Press the "Data Hold Button" again to release the data hold function.

10) Data Record(Max., Min.)

* Press the MAX/MIN/. Button to get into Data Record mode. A "REC" symbol appears on the LCD display. At the same time meter records value received by probe.

* Press again, " Max " symbol appears on the left down corner of the LCD and the Maximum value during recording procedure will displayed on the LCD at the same time.

Measuring Consideration:

The yellow dot mark on the sensor head indicates the " yellow dot mark " need to face against the direction of air flow .