

AA9604


Installation Guide

09AA96Q.MLA

AA9604 Installation Guide

Installing the Auto Attendant

Please follow the diagram below to install your auto attendant.

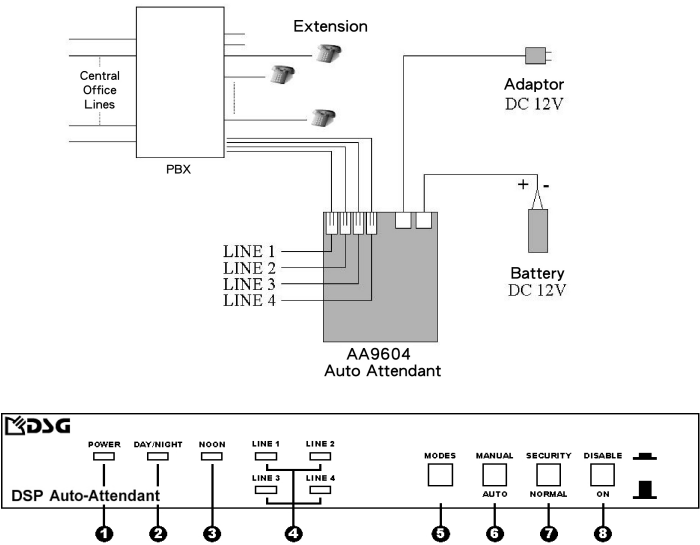

LED Indicators

1	Power	On: The adapter is plugged
2	Day/Night	On: In Day mode Off: In Night mode
3	Noon	On: In Noon mode
4	Line 1-2	On: The line is occupied and the system is answering calls.

Switch Buttons

5	Modes	Press to switch modes in Day, Night and Noon order.
6	Manual/ Auto	Upper: The system switches among the DAY/ NIGHT/ NOON modes automatically according to the time schedule. Lower: The system is in the mode you manually set.
7	Security/Normal	Upper: The programming function is available with a password. Lower: The programming Function is locked.
8	Disable/On	Upper: The system is running normally. Lower: The system is disabled and lines will be in off-hook status.

Configuring the system

- Call into the system.
- Press the password to enter system programming mode. The default password is [#][1][2][3][4].
- Set current date (Function [370]) and time (Function [380]).
- Set First Flash Time [210] (and Second Flash Time [220], if necessary), Transfer Sequence [330], Ring-Back Recall Sequence [340] and Busy Recall Sequence [350] per your switch's specifications.

- Set Night Assistant Operator Extension [170] for Automatic Call Progress Learning (ACPL).
- Set Function [250] to [1#] to start ACPL for Ring-Back High [250], Ring-Back Low [260], Ring-Back Second Low [270], and Ring-Back Second High [460].
- Set Function [290] to [1#] to start ACPL for Busy High [290] and Busy Low [300].
- Set up First Extension Group ([700] and [701]).

System Parameter Table



Please use this table to input DTMF and other signals.

Signal	System Parameter	Telephone
DTMF 1	1	0 1
DTMF 2	2	0 2
DTMF 3	3	0 3
DTMF 4	4	0 4
DTMF 5	5	0 5
DTMF 6	6	0 6
DTMF 7	7	0 7
DTMF 8	8	0 8
DTMF 9	9	0 9
DTMF *	*	1 0
DTMF 0	0	1 1
DTMF #	#	1 2
HOOK TIME 1	H1	1 3
HOOK TIME 2	H2	1 4
PAUSE	,	1 5
EXTENSION	X	1 6

AA9604 快速安裝指南

安裝自動總機

請依下圖安裝您的自動總機系統。

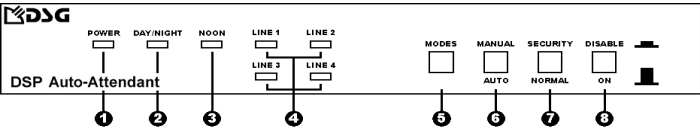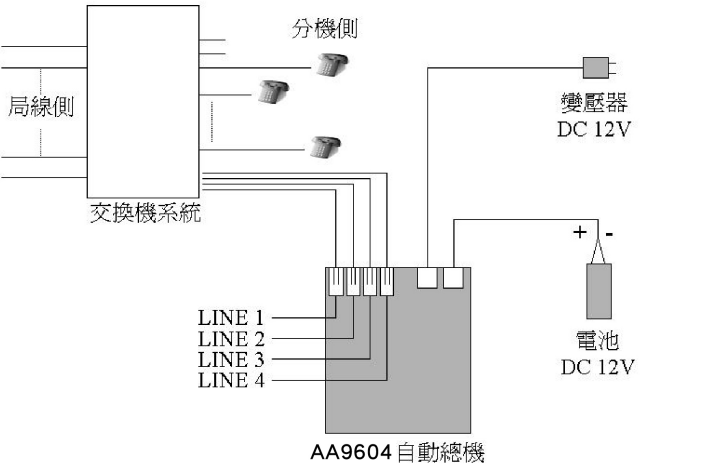

LED 指示燈

1	電源指示燈	恆亮: 電源供應中
2	日夜切換模式指示燈	恆亮: 日間模式 熄滅: 夜間模式
3	午休時段指示燈	恆亮: 午休模式
4	進線狀態指示燈	恆亮: 該線佔線中，系統正在應答進線電話。

按鈕

5	模式切換	依日間、夜間、午休時段順序，按此鍵可切換模式。
6	手動/自動模式切換	放開: 系統根據內部時間設定，自動切換模式日間、夜間、午休時段。 下壓: 系統設定為手動所輸入的時段。
7	系統保護/正常	放開: 可輸入密碼進入設定功能。 下壓: 設定功能鎖住中，無法變更設定。
8	系統關閉/正常	放開: 系統正常運作中。 下壓: 系統關閉中，線路顯示為忙線狀態。

設定系統

- 撥打電話進入系統。

2. 輸入密碼進入設定模式。預設密碼為[#][1][2][3][4]。
3. 設定系統目前日期(功能碼[370])與時間(功能碼[380])。
4. 請依您的交換機規格，設定第一轉接時間[210](若要需要，請再設定第二轉接時間[220])、轉接動作[330]、回鈴回叫動作[340]、忙音回叫動作[350]、留言燈開啟動作[560]、留言燈關閉動作[570]。
5. 設定夜間助理總機號碼[170]以便使用自動偵測學習。
6. 設定功能碼[250]為[1#]，系統會開始自動偵測學習回鈴High[250]、回鈴Low[260]、雙回鈴Low[270]與雙回鈴High[460]。
7. 將功能碼[290]設為[1#]，系統開始學習忙音High[290]與忙音Low[300]。
8. 設定第1組分機起始與結束號碼([700]與[701])。

DTMF與電話輸入對照表



請使用下列對照表輸入DTMF信號。

功能動作	系統符號	電話輸入
DTMF 1	1	0 1
DTMF 2	2	0 2
DTMF 3	3	0 3
DTMF 4	4	0 4
DTMF 5	5	0 5
DTMF 6	6	0 6
DTMF 7	7	0 7
DTMF 8	8	0 8
DTMF 9	9	0 9
DTMF *	*	1 0
DTMF 0	0	1 1
DTMF #	#	1 2
HOOK TIME 1	H1	1 3
HOOK TIME 2	H2	1 4
PAUSE	，	1 5
EXTENSION	X	1 6

AA9604 快速安装指南

安装自动总机

请依下图安装您的自动总机系统。

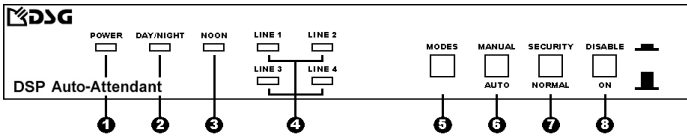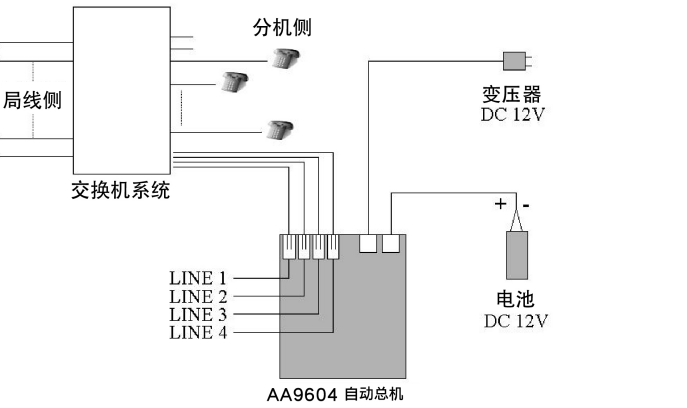

LED 指示灯

1	电源指示灯	恒亮: 电源供应中
2	日夜切换模式指示灯	恒亮: 日间模式 熄灭: 夜间模式
3	午休时段指示灯	恒亮: 午休模式
4	进线状态指示灯	恒亮: 该线占线中，系统正在应答进线电话。

按钮

5	模式切换	依日间、夜间、午休时段顺序，按此键可切换模式。
6	手动/自动模式切换	放开: 系统根据内部时间设定，

		自动切换模式日间、夜间、午休时段。 下压: 系统设定为手动所输入的时段。
7	系统保护/ 正常	放开: 可输入密码进入设定功能。 下压: 设定功能锁住中，无法变更设定。
8	系统关闭/ 正常	放开: 系统正常运作中。 下压: 系统关闭中，线路显示为忙线状态。

设定系统

1. 拨打电话进入系统。
2. 输入密码进入设定模式。默认密码为[#][1][2][3][4]。
3. 设定系统目前日期(功能码[370])与时间(功能码[380])。
4. 请依您的交换机规格，设定第一转接时间[210](若要需要，请再设定第二转接时间[220])、转接动作[330]、回铃回叫动作[340]、忙音回叫动作[350]、留言灯开启动作[560]、留言灯关闭动作[570]。
5. 设定夜间助理总机号码[170]以便使用自动侦测学习。
6. 设定功能码[250]为[1#]，系统会开始自动侦测学习回铃High[250]、回铃Low[260]、双回铃Low[270]与双回铃High[460]。
7. 将功能码[290]设为[1#]，系统开始学习忙音High[290]与忙音Low[300]。
8. 设定第1组分机起始与结束号码([700]与[701])。

DTMF与电话输入对照表

请使用下列对照表输入DTMF信号。

功能动作	系统符号	电话输入
DTMF 1	1	0 1
DTMF 2	2	0 2
DTMF 3	3	0 3
DTMF 4	4	0 4
DTMF 5	5	0 5
DTMF 6	6	0 6
DTMF 7	7	0 7

功能动作	系统符号	电话输入
DTMF 8	8	0 8
DTMF 9	9	0 9
DTMF *	*	1 0
DTMF 0	0	1 1
DTMF #	#	1 2
HOOK TIME 1	H1	1 3
HOOK TIME 2	H2	1 4
PAUSE	，	1 5
EXTENSION	X	1 6