


ELECTROSTATIC FIELD METER

Model : ESF-106



Your purchase of this ELECTROSTATIC FIELD METER marks a step forward for you into the field of precision measurement. Although this METER is a complex and delicate instrument, its durable structure will allow many years of use if proper operating techniques are developed. Please read the following instructions carefully and always keep this manual within easy reach.

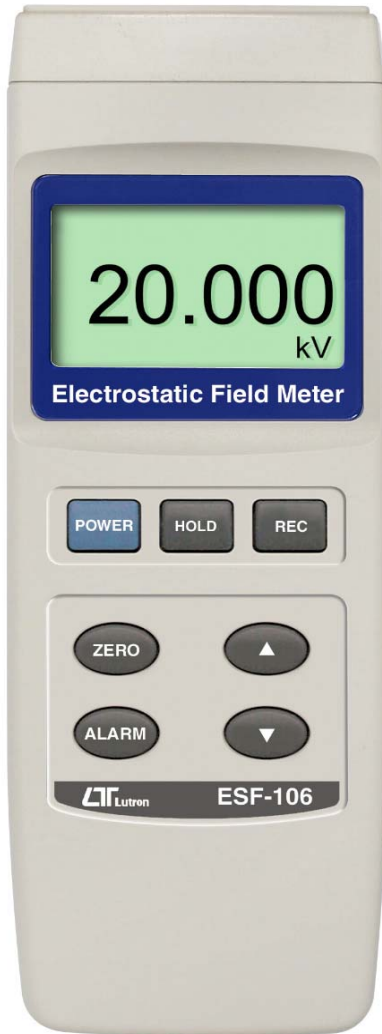

OPERATION MANUAL

TABLE OF CONTENTS

1. FEATURES.....	1
2. SPECIFICATIONS.....	1
2-1 General specifications.....	1
2-2 Electrical specifications.....	2
3. FRONT PANEL DESCRIPTION.....	3
3-1 Display.....	3
3-2 GROUND point.....	3
3-3 POWER / Backlight button.....	3
3-4 HOLD button.....	3
3-5 RECORD button (MAX. / MIN.).....	3
3-6 ZERO button.....	3
3-7 ▲ button.....	3
3-8 ALARM button.....	3
3-9 ▼ button.....	3
3-10 SENSE disc.....	3
3-11 Magnetic SPACER.....	3
3-12 RS-232 output terminal.....	3
3-13 RESET button.....	3
3-14 GROUND terminal.....	3
3-15 Stand.....	3
3-16 Battery Cover / Compartment.....	3
3-17 EARTH wire.....	3
3-18 Alligator clip.....	3
4. MEASURING PROCEDURE.....	4
4-1 Power ON / OFF.....	4
4-2 Grounding.....	4
4-3 Zero procedure.....	4
4-4 STATIC Voltage measurement procedure.....	4
4-5 ALARM Setting procedure.....	5
4-6 Data Hold.....	5
4-7 Data Record (Max. , Min. reading).....	6
4-8 LCD Backlight	6
5. SYSTEM RESET.....	6
6. MAINTENANCE.....	7
7. RS232 PC SERIAL INTERFACE.....	7
8. BATTERY REPLACEMENT.....	8

1. FEATURES

- * Professional precision STATIC Voltage meter with 0.001 kV resolution special digital display , battery operated.
- * LSI - circuit provides high reliability and durability .
- * Operation directly.
- * Measurement range : -19.999 kV to +19.999 kV.
- * High voltage alarm : +/- 18.000 kV.
- * ALARM setting : 0.010 kV to 18.000 kV.
- * Data hold , Record (Max. , Min.).
- * LCD with green light backlight, easy reading .
- * RS232 / USB Computer interface.
- * Built-in low battery indicator.
- * Power : DC 9V, MN1604 (PP3).

2. SPECIFICATIONS

2-1 General Specifications

Display	LCD size : 51 mm x 30 mm , Max. indication : ± 19999 . LCD with backlight (On/Off).
Circuit	Custom one-chip of microprocessor LSI circuit.
Measurement	Static Voltage : -19.999 kV to +19.999 kV
Over input	" ---- " mark indication.
Zero adjustment	ZERO button.
Sampling time	Approx. 0.5 second .
Data hold	Freeze the display reading.
Memory recall	Maximum and Minimum value.
Data output	RS232/USB PC Computer interface. * Connect the optional RS232 cable UPCB - 02 will get the RS232 plug. * Connect the optional USB cable USB - 01 will get the USB plug.

Operation Temp.	0 °C to 50 °C (32 °F to 122 °F).
Operation humidity	Less than 70% RH, non-condensing.
Power supply	Alkaline or Heavy duty type DC 9V battery. 006P , MN1604 (PP3) or equivalent
Power consumption	Approx. DC 12 mA
Weight	215 g / 0.476 LB, w/o battery.
Dimension	195x68x35 mm (7.6x2.6x1.38 inch).
Accessories included	Instruction manual..... 1 PC 1" Magnetic Spacer..... 1 PC Ground wire..... 1 PC Ground CLIP..... 1 PC Carrying case, CA-06..... 1 PC
Optional accessories	* USB cable, USB-01 * RS232 cable, UPCB-02 * Data Acquisition software, SW-U801-WIN. * Excel Data Acquisition software, SW-E802.

2-2 Electrical Specifications

Static Voltage

Range	Resolution	Accuracy
+19.999 to -19.999 kV	0.001 kV	± (5% reading + 50 d)

Remark :

- * Accuracy @ 23°C ± 5°C
- * This meter is not recommended for the usage of long-term measurement.
- * The above spec. accuracy are tested under the environment . RF Field Strength less than 3 V/M & frequency less than the 30 MHz only .

3. FRONT PANEL DESCRIPTION

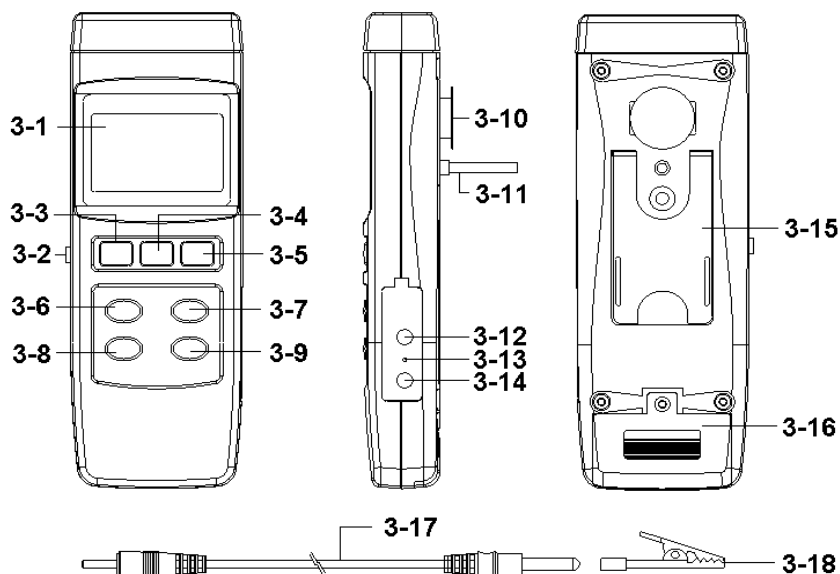


Fig. 1

- 3-1 Display
- 3-2 GROUND point
- 3-3 POWER / Backlight button
- 3-4 HOLD button
- 3-5 RECORD button (MAX. / MIN.)
- 3-6 ZERO button
- 3-7 ▲ button
- 3-8 ALARM button
- 3-9 ▼ button
- 3-10 SENSE disc
- 3-11 Magnetic SPACER
- 3-12 RS-232 output terminal
- 3-13 RESET button
- 3-14 GROUND terminal
- 3-15 Stand
- 3-16 Battery Cover / Compartment
- 3-17 EARTH wire
- 3-18 Alligator clip

4. MEASURING PROCEDURE

Caution :

If you bring the instrument too close to a charged surface, an electrical arc may occur. To avoid this and take reading safely, always bring the instruments toward a target surface from a distance of several inches.

4-1 Power ON /OFF

1. Press the " POWER / Backlight button " (3-3 , Fig. 1) more than 2 seconds to Turn ON the meter.
2. Press the " POWER / Backlight button " (3-3 , Fig. 1) more than 2 seconds to Turn OFF the meter.
- 3 If no buttons are pressed in 10 minutes . This meter will AUTO POWER OFF .

4-2 Grounding

Before use the meter. you have to grounding the meter. choose one of below two ways.

- 1 Use the accessories EARTH wire (3-17 , Fig.1) to connect build EARTH from the meter " GROUND terminal " (3-14 , Fig.1).
- 2 Operator is finish grounding to the build EARTH for Anti-static wrist strap . and finger has to press on the " GROUND point " (3-2 , Fig.1).

4-3 Zero procedure

Before you measure STATIC Voltage. If the meter has a few reading on the screen .You can press the " ZERO button " (3-6 , Fig. 1) once to clear the reading. Or press the " ZERO button " (3-6 , Fig.1) more than once.

4-4 STATIC Voltage measurement procedure

When measurement the STATIC Voltage . use the " Magnetic SPACER " (3-11 , Fig.1) to magnetically back of the meter . just below the " SENSE disk " (3-10 , Fig.1). to make sure between " SENSE disk " (3-10 , Fig.1) and test distance is 1 inch (25.4 mm \pm 0.5 mm) .

1. Press the " POWER / Backlight button " (3-3 , Fig.1) more than 2 seconds to Turn ON the meter.
2. Make sure the meter is grounded before operate .
3. Just point the " SENSE disk " (3-10 , Fig.1) toward the object . without touching the disk .
4. Keep your fingers away from the test area to avoid accidental discharge .
5. Now you can reading the STATIC Voltage from screen .

4-5 ALARM Setting procedure

1. This meter has HIGH Voltage WARNING function .
When reading is over 18.000 kV . the meter will beeper to user . (this meter can reading over 19.990 kV.)
2. If you have another voltage value to limit . you can press the " ALARM button " (3-8 , Fig.1) more than 2 seconds to Turn ON the setting function. and ALARM symbol will highlighting . The first digit of alarm value will flash . Now you can press the " ▲ button " (3-7 , Fig.1) to increase the value . or press the " ▼ button " (3-9 , Fig.1) to decrease the value .
3. When you finish the first figures . you can press the " ALARM button " (3-8 , Fig.1) to setting next figures .
4. When you finish your limit value . you can press the " ALARM " button " (3-8 , Fig.1) more than 2 seconds to save the setting value and return to measure mode .
5. If ALARM value is setting " 0.000 " kV . it means turn off the ALARM function.

4-6 Data Hold

During the measurement , press the " HOLD Button " (3-4 , Fig.1) once will hold the measured value & the LCD will display a " HOLD " symbol . Press the " HOLD Button " (3-4 , Fig.1) once again will release the data hold function .

4-7 Data Record (Max., Min. reading)

- 1 The data record function records the maximum and minimum readings . Press the " REC Button " (3-5 , Fig. 1) once to start the Data Record function and there will be a " REC " symbol on the display .
- 2 With the " REC " symbol on the display :
 - a) Press the " REC Button " (3-5 , Fig.1) once , the " REC MAX " symbol appear on the display . and LCD will showing maximum value .
 - b) Press the " REC Button " (3-5 , Fig.1) again, the " REC MIN " symbol along with the minimum value will appear on the display. and LCD will showing minimum value .
 - c) Press the " REC Button " (3-5 , Fig.1) again, the " MIN " symbol will disappear only " REC " symbol on the display. and LCD will showing current reading .
- 3 To exit the memory record function , just press the " REC button " (3-5 , Fig.1) for 2 seconds at least. The display will revert to the current reading.

4-8 LCD Backlight

- 1 You can turn ON the Backlight for easy readout.
When use the instrument in a dark place or under the SUN .
- 2 If the instrument is working. Press the " POWER / Backlight button " (3-3 , Fig.1) once , can turn ON the Backlight.
- 3 Press the " POWER / Backlight button " (3-3 , Fig.1) again will turn OFF the Backlight.

5. SYSTEM RESET

If the meter happen the troubles such as :
CPU system is hold (for example, the key button can not be operated...) . Then make the system RESET will fix the problem . The system RESET procedures will be either following method : During the power on, use a pin to press the " RESET button " (3-13 , Fig.1) once a while will reset the circuit system .

6. MAINTENANCE


- 1 Instruments used in dusty environments should be stripped and cleaned periodically.
- 2 Do not leave the instrument exposed to direct heat from the sun for long periods.
- 3 Before removing the battery compartment cover, ensure that the instrument is disconnect from any circuit and the instrument is power OFF .

7. RS232 PC SERIAL INTERFACE

The instrument has RS232 PC serial interface via a 3.5 mm terminal (3-12, Fig. 1).

The data output is a 16 digit stream which can be utilized for user's specific application.

A RS232 lead with the following connection will be required to link the instrument with the PC serial port.

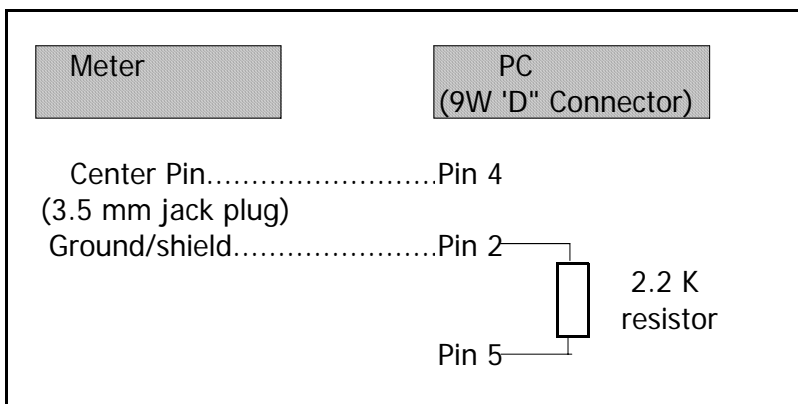

The 16 digits data stream will be displayed in the following format :

D15 D14 D13 D12 D11 D10 D9 D8 D7 D6 D5 D4 D3 D2 D1 D0

Each digit indicates the following status :

D15	Start Word, 02
D14	4
D13	1
D12, D11	Annunciator for Display DC kV = G9
D10	Polarity 0 = Positive 1 = Negative
D9	Decimal Point(DP), position from right to the left 0 = No DP, 1 = 1 DP, 2 = 2 DP, 3 = 3 DP
D8 to D1	Display reading, D1 = LSD, D8 = MSD For example : If the display reading is 1234, then D8 to D1 is : 00001234
D0	End Word, 0D

RS232 FORMAT : 9600, N, 8, 1

Baud rate	9600
Parity	No parity
Data bit no.	8 Data bits
Stop bit	1 Stop bit

8. BATTERY REPLACEMENT

- 1) When the Top of left corner on LCD display show " LoBAT " , it is necessary to replace the battery, However in -spec. measurement may still be made for several hours after LOW BATTERY INDICATOR appears before the instrument become inaccurate.
- 2) Open the screw of " Battery Cover " (3-16 , Fig.1) by screwdriver, then move the battery.
- 3) Replace with 9V battery and reinstate the cover.