# %RH/Temp, Type K Temp, 4 in 1

# **HUMIDITY / THERMOMETER**

Model: HT-306S



Your purchase of this **HUMIDITY / THERMOMETER** marks a step forward for you into the field of precision measurement. Although this meter a complex and delicate instrument, its durable structure will allow many years of use if proper operating techniques are developed. Please read the following instructions carefully and always keep this manual within easy reach.

# **OPERATION MANUAL**

# **TABLE OF CONTENTS**

1.	FEATURES	1
2.	SPECIFICATIONS	1
	FRONT PANEL DESCRIPTION	
	3-1 Display	5
	3-2 Power button	5
	3-3 Hold button	5
	3-4 REC button	5
	3-5 FUNC/SET button	5
	3-6 Type K T1 probe socket	5
	3-7 Humidity probe socket	5
	3-8 Stand	5
	3-9 Battery compartment/Cover	5
	3-10 Probe Plug ( Humidity/Temp. )	5
	3-11 Probe Handie ( Humidity/Temp. )	5
	3-12 Probe Sensor ( Humidity/Temp. )	5
4.	GENERAL MEASURING PROCEDURE	6
	4-1 Humidity probe measurement	6
	4-2 Type K one probe ( single channel ) measurement	7
	4-3 Data Hold	8
	4-4 Data Record (Max, Min reading)	8
5.	ADVANCED SETTING PROCEDURE	9
	5-1 Auto power ON/OFF	9
	5-2 Change the beeper sound ON/OFF	9
	5-3 Change the Temp °C, °F unit	#
6.	BATTERY REPLACEMENT	#
7	OPTIONAL TEMP PROBES	Н

## 1. FEATURES

- \* Hight Precision Humidity & Temp. measurement.
- \* Fast responstime Humidity measurement.
- \* One channels type K thermometer.
- \* Wide Temp. range measurement.
- \* °C/°F, 0.1 degree.
- \* Heavy duty & compact housing case. and high accuracy.
- \* LCD with two display, easy readout.
- \* Records Maximum and Minimum readings with recall.
- \* Data hold function for freezing the desired value.
- \* Meter can default auto power off or manual power off.
- \* Meter can default the measuring unit to  $^{\circ}$ C or  $^{\circ}$ F.
- \* Few panel buttons, easy operation.
- \* Built-in low battery indicator.
- \* Heavy duty & compact housing case.

## 2. SPECIFICATIONS

#### 2-1 General Specifications

Circuit	Custom one-chip of microprocessor LSI		
	circuit.		
Display	LCD size : 46 mm x 28 mm		
	dual function LCD disp	olay.	
Display Unit	°C, °F.		
Resolution	Type K	0.1 °C, 0.1 °F.	
	Humidity	0.1 %RH.	
Channels	Туре К	T1	
	Humidity	Single channel	
Sensor type	Humidity		
	Thermocouple type	Type K.	

Temperature	Automatic temp. compensation for the	
Compensation * Type K	cold junction for type K thermometer	
Linear	Linear Compensation for the full range.	
Compensation		
Probe Input	Humidity probe :	
Socket	DIN 4 pin socket.	
	Thermocouple couple probe :	
	Standard 2 pin type K socket.	
Over Indication	Show " ".	
Data Hold	Freeze the display reading.	
Memory Recall	Maximum & Minimum value.	
Sampling Time	Approx. 1 second.	
of display		
Power off	Auto shut off saves battery life or	
	manual off by push button.	
Operating	0 to 50 ℃.	
Temperature		
Operating	Less than 80% R.H.	
Humidity		
Power Supply	006P DC 9V battery	
	( Alkaline or Heavy duty type ).	
Power Current	Approx. DC 3.5 mA	
Weight	115 g/ 0.25 LB.	
Dimension	131x70x27 mm, ( 5.1x2.7x1.1 inch ).	
Accessories	Humidity probe1 PCS	
Included	Instruction manual1 PCS	
Optional	* Type K thermocouple probe.	
Accessories	TP-01, TP-02A. TP-03, TP-04	

### 2-2 Electrical Specifications (23±5 $\mathcal{C}$ )

**Humidity / Temperature** 

Humidity	Range	10 % to 95 % RH
	Resolution	0.1 % RH
Accuracy		≥ 70 % RH
		± ( 3 % reading + 1 % RH
		< 70 % RH
		± 3 % RH
emperature	Range	0 $^{\circ}$ to 50 $^{\circ}$ C, 32 $^{\circ}$ F to 122 $^{\circ}$ F
	Resolution	0.1 degree
	Accuracy	°C ± 0.8 °C
		°F ± 1.5 °F

**Dew Point(Humidity)** 

$^{\circ}\mathbb{C}$	Range -25.3℃ to 48.9 ℃	
	Resolution	0.1 ℃
°F	Range	-13.5 °F to 120.1 °F
	Resolution	0.1 °F

#### Remark:

- Dew Point display value is calculated from the Humidity/Temp. measurement automatically.
- \* The Dew Point accuracy is sum accuracy value of Humidity & Temperature measurement..

#### Wet bule (Humidity)

$^{\circ}\!\mathbb{C}$	Range	-21.6℃ to 50.0 ℃	
	Resolution	0.1 ℃	
°F	Range	-6.9 °F to 122 °F	
	Resolution	0.1 °F	

#### Remark:

- \* Wet bule display value is calculated from the Humidity/Temp. measurement automatically.
- Wet bule Point accuracy is sum accuracy value of Humidity & Temperature measurement..

Type K Thermometer

ensor Type	Resolution	Range Ad	ccuracy
Type K	0.1 ℃	-50.0 to 1300.0 ℃	± ( 0.4 % + 0.5 °C )
		-50.1 to -199.9 ℃	± ( 0.4 % + 1 °C )
	0.1 °F	-58.0 to 2372.0 °F	± ( 0.4 % + 1 °F )
		-58.1 to -327.8 °F	± ( 0.4 % + 1.8 °F )

@ Above specification tests under the environment RF Field Strength less than 3 V/M & frequency less than 30 MHz only.

# 3. FRONT PANEL DESCRIPTION

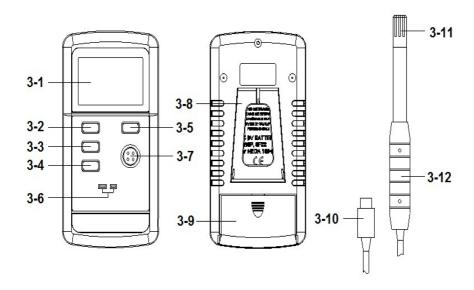


Fig. 1

\* FUNC = Function

- 3-1 Display
- 3-2 Power button
- 3-3 Hold button
- 3-4 REC button
- 3-5 FUNC/SET button
- 3-6 Type K T1 probe socket
- 3-7 Humidity probe socket
- 3-8 Stand
- 3-9 Battery compartment/Cover
- 3-10 Probe Plug (Humidity/Temp.)
- 3-11 Probe Handle ( Humidity/Temp. )
- 3-12 Humidity sensor ( Humidity/Temp. )

# 4. GENERAL MEASURING PROCEDURE

#### Meter defaults:

- \* The temperature reading unit is  $^{\circ}$ C.
- \* Beeper sound on.
- \* Auto power off.

#### 4-1 Humidity / Dew / Wet bule measurement

- 1) Insert the "Humidity probe plug (3-10, Fig. 1)" into the "Humidity probe socket " (3-7, Fig. 1).
- 2) Power on the meter by pressing the "Power button" (3-2, Fig. 1) once.
- 3) Press the "Function button" (3-5, Fig. 1) once can select sequence until the LCD show the "Fig 3" text the display will show the Humidity & temperature reading that sensing from the probe's head.

Fig 3

4) Press the "Function button" (3-5, Fig. 1) once can select sequence until the LCD show the "Fig 4" text the display will show the Dew point reading that sensing from the probe's head.



Fig 4

5) Press the "Function button" (3-5, Fig. 1) once can select sequence until the LCD show the "Fig 5" text the display will show the Wet bule reading that sensing from the probe's head.



Fig 5

#### 4-2 Type K one probe ( single channel ) measurement

Insert the "Type K Temp. probe plug" into the "T1 probe socket" (3-6, Fig. 1).

Power on the meter by pressing the "Power button" (3-2, Fig. 1) once .

Press the "Function button" (3-5, Fig. 1) once can select the sequence until the LCD show the "Fig 2" symbol the display will show the temperature reading that sensing from the probe's head.

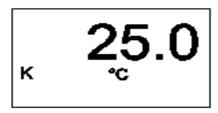


Fig 2

#### Note:

#### 4-3 Data Hold

During the measurement, press the "Hold Button" (3-3, Fig. 1) once will hold the measured value & the LCD will display a "HOLD" symbol.

\* Press the "Hold Button "once again will release the data hold function.

#### 4-4 Data Record (Max., Min. reading)

- \* The data record function records the maximum and minimum readings. Press the "REC Button" (3-4, Fig. 1) once to start the Data Record function and there
  - will be a " REC " symbol on the display.
- \* When the " REC " symbol on the display :
  - a) Press the "REC Button" (3-4, Fig. 1) once, the "REC MAX" symbol along with the maximum value will appear on the display.
  - b) Press the "REC button" (3-4, Fig. 1) again, the "REC MIN" symbol along with the minimum value will appear on the display.
  - c) Press the "REC button" (3-4, Fig. 1) once, the Display will show the "REC" symbol only and execute the memory function continuously.
  - d) To exit the memory record function, just press the " REC " button for 2 seconds at least. The display will revert to the current reading.

# 5. ADVANCED SETTING PROCEDURE

Before executing advanced setting procedures, exit the "Hold function" and the Record "function.

- a. Hold the "FUNC/SET button" (3-5, Fig. 1) at least five seconds will enter the Advanced Setting Procedures.
- b. One by one to press the "FUNC/SET button" (3-5, Fig. 1) once to select the three main function and show the text on the lower display as:

**PoFF......** Auto power ON/OFF management **bEEP......** Change the beeper sound ON/OFF **t-CF......** Change the Temp °C, °F unit

#### 5-1 Auto power ON/OFF

(Lower display show "PoFF")

- a. Use " HOLD button " ( 3-3, Fig. 1 ) to select " YES " or " no ".
  - \* YES: Auto power off.
  - \* no : Auto power disable,
- b. After select the desiring function ( YES or no ), press the "REC button " ( 3-4, Fig. 1 ) to save the function with default.

#### 5-2 Change the beeper sound ON/OFF

(Lower display show "bEEP")

- a. Use "HOLD button" (3-3, Fig. 1) to select "YES" or "no ".
  - \* YES : Beeper sound ON
  - \* no : Beeper souund OFF ( disable ),
- b. After select the desiring function ( YES or no ), press the "REC button " ( 3-4, Fig. 1 ) to save the function with default.

#### 5-3 Change the Temp $\mathcal{C}$ , $\mathcal{F}$ unit

(Lower display show "t-CF")

- a. Use "HOLD button" (3-3, Fig. 1) to select "C" or "F".
  - \* C: °C \* F: °F
- b. After select the desiring text (  $^{\circ}\mathbb{C}$  or  $^{\circ}\mathbb{F}$  ), press the " REC button " ( 3-4, Fig. 1 ) to save the data with default.

## **6. BATTERY REPLACEMENT**

- 1) When the left corner of LCD display show " : ", it is necessary to replace the battery. However, in-spec. measurement may still be made for several hours after low battery indicator appears before the instrument become inaccurate.
- 2) Slide the "Battery Cover" (3-9, Fig. 1) away from the instrument and remove the battery.
- 3) Replace with 9V battery (Alkaline or Heavy duty type) and reinstate the cover.
- 4) Make sure the battery cover is secured after changing the battery.

# 7. OPTIONAL TEMP. PROBES

# Type K Temp. probes

(Type K) TP-01	* Max. short-term operating Temperature: 300 °C (572 °F).  * It is an ultra fast response naked-bead thermocouple suitable for many general purpose application.
Thermocouple	* Measure Range: -50 $^{\circ}\!$
Probe	-58 °F to 1650 °F.
(Type K), TP-02A	* Dimension:12cm tube, 3.2mm Dia.
Thermocouple	* Measure Range: -50 ℃ to 1100 ℃,
Probe	-58 °F to 2012 °F.
(Type K), TP-03	* Dimension: 13.6 cm tube, 8mm Dia.
Surface Probe	* Measure Range: -50 $^{\circ}\mathrm{C}$ to 400 $^{\circ}\mathrm{C}$ ,
(Type K), TP-04	-58 °F to 752 °F.
	Temp. sensing head - 15 mm Dia.
	Probe length - 120 mm.